


WIRING CONNECTION

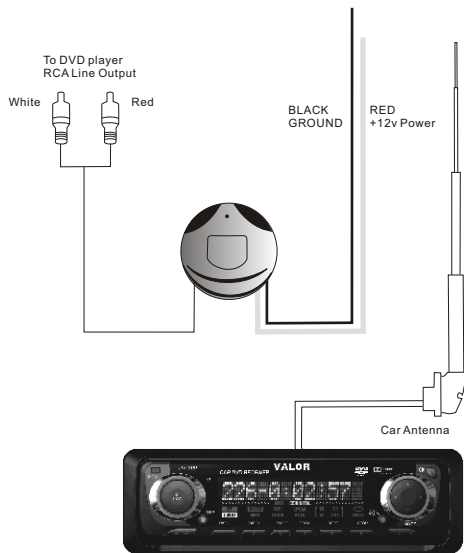

VALOR
MULTIMEDIA

ACC-FMT7

Installation



FCC ID:RJX93FMT07

INSTRUCTION MANUAL

PLL FM Stereo Transmitter

Model No:ACC-FMT7

BEFORE INSTALLING THE TRANSMITTER

Do not install the unit in the following locations.
Locations exposed to direct sunlight.
Where hot air is discharged from the car heater.
In areas subject to extreme temperatures.

INSTALLATION

The FM Stereo Transmitter must be mounted within 24 inches of your radio so that its power cable can reach the radio power antenna lead.
The FM Station Frequency Selector Switch is located on the face and you may wish to change it after your initial checkout or sometime in the future.

FM RADIO FREQUENCY PRESET

FM RADIO FREQUENCY PRESET

The FM Stereo Transmitter can operate on from 87.7MHz to 88.9MHz. (7channel-200KHz Step)

The Frequency Selector Slide Switch is on one channel of the Transmitter and was set 87.7MHz at the factory. Assuming it is still there, turn on the car stereo and select FM band operation. Tune the radio to 87.7MHz (depending on frequency to which you have set the unit), or push the pre-set memory button.

INTERFERENCE ON 87.7MHz;

If interference is experienced on 87.7MHz, change the position of the frequency select switch on the face of the FM Stereo transmitter and tune the radio to match the selected frequency.

FREQUENCY SELECTOR SWITCH

| 1 | 2 | 3 | 4 | Frequency(MHz) |
|--------------------------|--------------------------|--------------------------|--------------------------|----------------|
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 87.7MHz |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 87.9MHz |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 88.1MHz |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 88.3MHz |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 88.5MHz |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 88.7MHz |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 88.9MHz |

SPECIFICATIONS:

Frequency:87.7MHz to 88.9MHz(7channel-200KHz Step)

RF Output Level: 60dB μ Max

S/N Ratio: 65dB

Stereo Separation: 40dB

FM Modulation Depth: 75KHz at L+R+Pilot

Operating Voltage:10V-16VDC

Dimensions: 33R*20.6mm

Weight: 48.2g

.Specifications and design are subject to change without notice